

## Bread Toasting Instructions

1. Place your Toaster on a flat, level surface. Ensure the stability of the appliance.
2. Plug power cord into a 120VAC electrical outlet. The unit may emit an odor and/or smoke during the first few uses from oils used in manufacturing. This is normal for a new Toaster.
3. Set one or both of the Browning Selector Knobs to the desired toast color. Light (#1) is for warming and very light toasting; Dark (#7) is for dark toasting.
4. Remove all protective wrappings from bread or toaster food before placing in Toasting Slots.
5. Avoid toasting torn slices of bread and broken pastries, which may get lodged in Toasting Slots.
6. Place bread or toaster food into one or both pairs of Toasting Slots and push down the corresponding Toasting Lever(s) to lower bread and begin toasting. Centering Guides will automatically center bread for even toasting. When toasting a single slice, the bread may be placed in either Toasting Slot, but may toast slightly darker on the inside than on the outside.

*NOTE: The Toasting Lever(s) will not lock down unless the Toaster is plugged into an electrical outlet.*

7. When the selected color is reached, the Toasting Lever(s) will pop up. The Toaster will shut off automatically.
8. Unplug cord from wall outlet when not in use.

*NOTE: To prevent a fire hazard, never place bread over the opening of the Toaster, but always place it into the Toasting Slot(s).*

*NOTE: Do not operate the Toaster unless both Crumb Trays are in position and correctly fitted.*

9. To interrupt toasting, press either one or both of the corresponding CANCEL Buttons.